SIEMENS 5¹¹⁶







G120P supplemental system components

IOP, BOP-2, Blanking cover

- Operator panel IOP (Intelligent Operator Panel) with application-specific commissioning wizards, clear text display and USB interface
- Operator panel BOP-2 (Basic Operator Panel), menu driven and 2-line display
- Blanking cover, degree of protection IP55/UL Type 12
- Drive Operating temperature 0 ... 50 °C, with blanking cover 0 ... 60 °C

Use

Operator panels for comfortable on-site commissioning, control as well as diagnostics, and simple cloning of complete VSD data sets. As an option, a blanking cover (IP55) can be used in lieu of the operator panel to cover the interface.

- Intelligent Operator Panel IOP, degree of protection IP54/UL Type 12
 Menu-driven with clear text display, help function and application wizards for commissioning, diagnostics, and operation of standard drives.
- Basic Operator Panel BOP-2, degree of protection IP55/UL Type 12
 Menu-driven tool with 2-line display for fast and comfortable commissioning of the
 VSD. Simultaneous display of parameter and parameter value. Commission a drive
 without a print out of the parameter list.



- 1. ESC/Exit
- 2. Navigation and OK wheel
- 3. INFO
- 4. OFF
- 5. Hand/Auto
- 6. ON
- ESC button (1) to return to menu status or the previous display
- Selection of menu items using the navigation and OK wheel (2)
- Explanatory help texts via the INFO button (3)
- ON/Off buttons (6) and (4) to switch on and off and start the inverter
- Button (5) for the changeover from Auto to manual operation
- · On the rear:
 - Type plate
 - 1 USB connection
 - 1 RS232 plug
 - 4 door-mounting screw recesses
- Detailed information on operation is available in the user's guide SINAMICS IOP (A5E00110011A2 AA)

IOP functions

- Very user-friendly and powerful operator panel for SINAMICS G120P standard drives.
- Easy commissioning, for beginners as well as drive experts thanks to clear text displays, menus, and interactive application wizards
- · Fast commissioning wizard for general commissioning
- Drive commissioning without printed parameter lists by displaying the parameters in clear text, explanatory help texts, and parameter filters
- Support of repeat commissioning by loading a parameter list to other drives of the same type (up to 16 parameter sets can be saved)
- Includes wizards for simple configuration of important applications including pumps, fans, and compressors
- Diagnostics of errors and warning messages displayed in clear text
- Graphical or numeric visualization of up to two process values
- Updates and extensions via the integrated USB interface:
 - Drag & Drop to add new drive types, user languages and wizards
 - Powered via USB interface during updates
- Pre-installed language packages in German, English, French, Italian, and Spanish
- Language packages, updates, and extensions are available at no charge under http://support.automation.siemens.com/WW/view/en/30563514/130000



- 1. ESC/Exit button
- 2. Arrow buttons
- 3. OK
- 4. OFF
- 5. Hand/Auto
- 6. ON
- ESC button (1) to return to menu status or the previous display
- Navigate menus and set values via the arrow buttons (2)
- OK button (3) to select and confirm values
- ON/Off buttons (6) and (4) to switch on and off and start the inverter
- Button (5) for the changeover from Auto to manual operation
- On the rear:
 - Type plate
 - 1 RS232 plug
 - Door-mounting screw recesses
- Detailed information on operation is available in the user's guide SINAMICS BOP-2 (A5E02778927A AA)

BOP-2 functions

- Simple commissioning of standard drives with menu-driven 2-line display.
- Drive commissioning without printed parameter lists by displaying the parameters in clear text, explanatory help texts, and parameter filters
- Direct, menu-driven and easy diagnostics
- Numeric visualization of up to two process values for simple monitoring
- Support of repeat commissioning by loading a parameter list to other devices of the same type.

	IOP	BOP-2
	STANGES M. A. C. Angle for [1] in At a size fore [1] in At a size fore [2] in The size of [2] in The size of [3] in	BC LIM V 63%5'
Operator panel	Large, clear text displayMenu-driven and application wizards	7-segment displayMenu driven
Possible applications	Mounted directly on the SINAMICS G120P Degree of protection IP54/UL Type12 5 available languages	Mounted directly on the SINAMICS G120P Degree of protection IP55/UL Type12
Commissioning	Repeat commissioning using the cloning function User-defined parameter list, that only displays the parameters you want to use Simple commissioning of standard applications using application-specific wizards; no knowledge of parameter structure required Commissioning without documentation is possible for simple applications	Repeat commissioning using the cloning function
Operation and GUI	Direct manual drive operation Simple changeover between Auto and manual modes Rotary selection and press for enter interface ensure intuitive navigation Graphical display with trend functions to depict status values, such as pressure, flow, in bar diagrams Status display with freely selectable units for physical values	 Direct manual drive operation Simple changeover between Auto and manual modes 2-line display to display up to 2 process values with text
Minimize service times	Diagnostics using clear text display, without documentation and available on site Simple update of languages, wizards, and firmware via USB Language packages, updates, and extensions are available at no charge under http://support.automation.siemens.com/WW/view/en/30563514/130000	Menu-driven diagnostics with 7-segment display

Description	Order no. / MLFB	Type (ASN)
SINAMICS G120P IP20 / IP54, Intelligent Operator Panel (IOP)	6SL3255-6AA00-4JA0	G120P-IOP
SINAMICS G120P IP20 / IP55, Basic Operator Panel (BOP-2)	6SL3255-6AA00-4CA0	G120P-BOP-2

Accessories

Description	Order no. / MLFB	Type (ASN)
SINAMICS G120P Door kit (IP54) / BOP-2 (IP55), KIT UL TYP12 for Intelligent Operator Panel IOP and Basic Operator Panel BOP-2 consisting of: Seals, mounting	6SL3256-6AP00-0JA0	G120P-Door-Kit
materials, and connection cable (5M)		

Product documentation

Operating Instructions

IOP

Detailed information on operating the SINAMICS IOP

Document no.: A5E00110011A2 AB

Getting Started Guide

IOP

Product insert for a quick introduction

Document no.: A5E02449215B2

Operating Instructions

BOP-2

Detailed information on operating the SINAMICS BOP-2

Document no.: A5E02778927A AB

Getting Started Guide

BOP-2

Product insert for a quick introduction

Document no.: A5E02826349A